
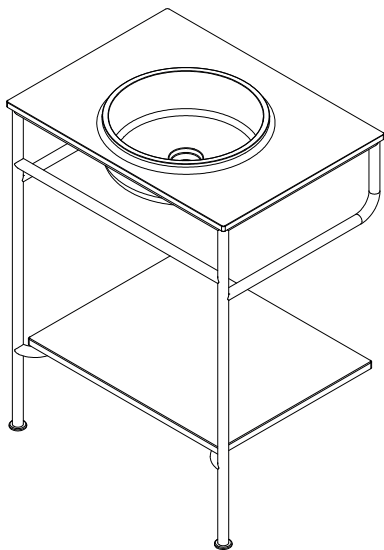




# KOS

## Rise



design studio Zaven

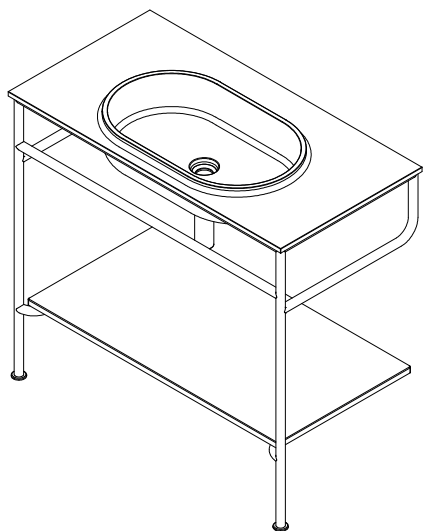

- I** Istruzioni per l'installazione
- GB** Instructions for the installation
- F** Instructions pour l'installation
- D** Montageanleitungen zur installation
- E** Instrucciones para la instalacion
- RU** ИНСТРУКЦИИ ПО МОНТАЖУ
- PL** Instrukcje instalacji

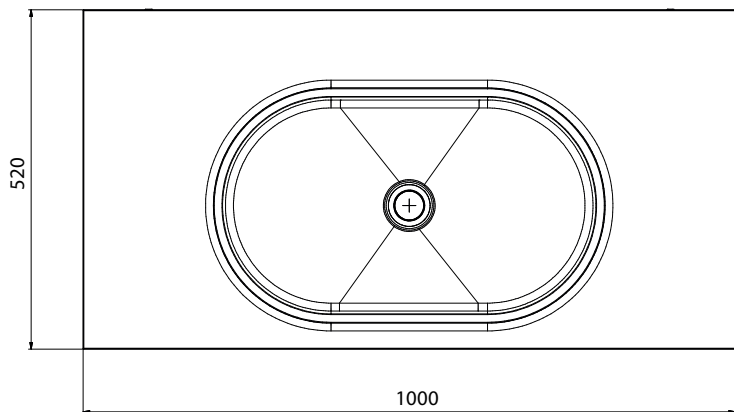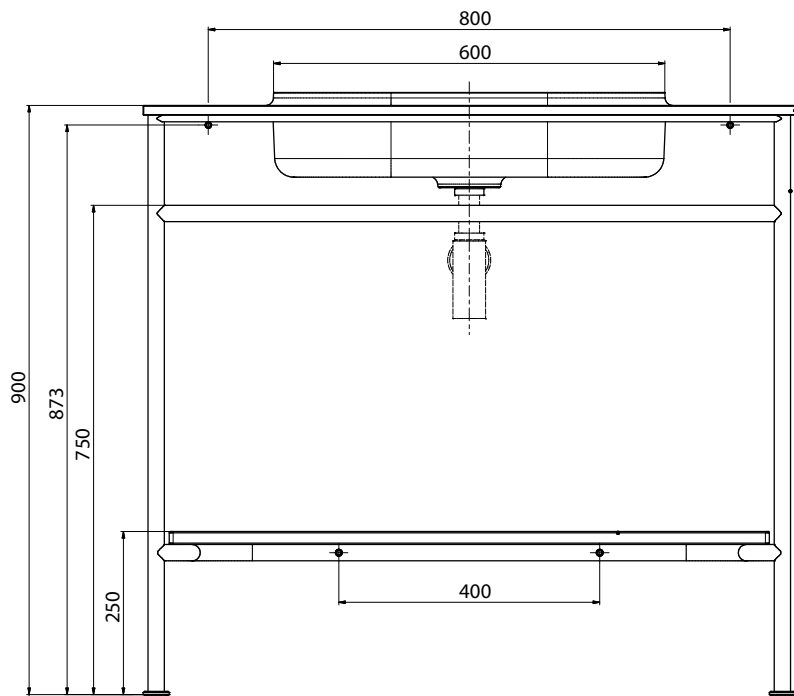

8R1201BINE

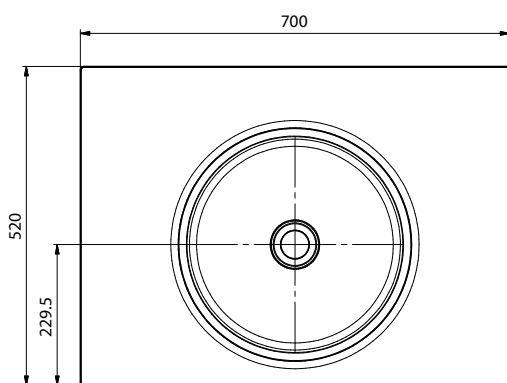
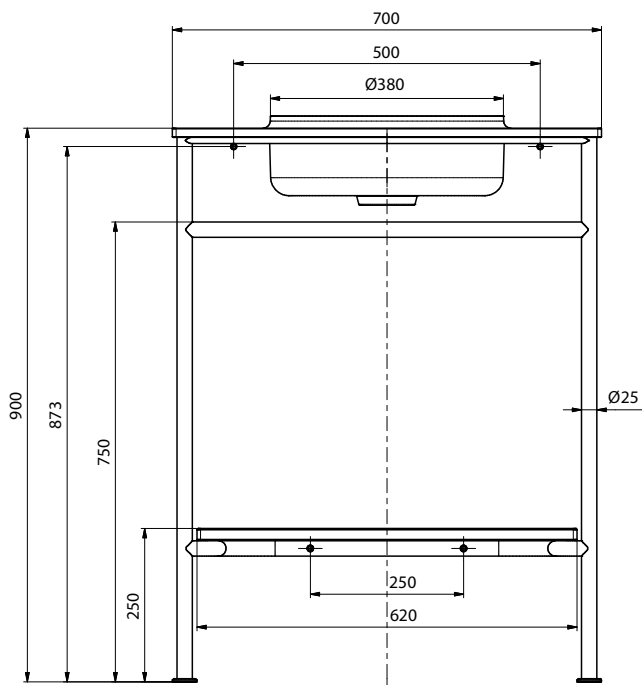


8RI200BINE


# Installazione - Installation

8RI201BINE-8RI200BINE


## Utensili necessari - Necessary tools

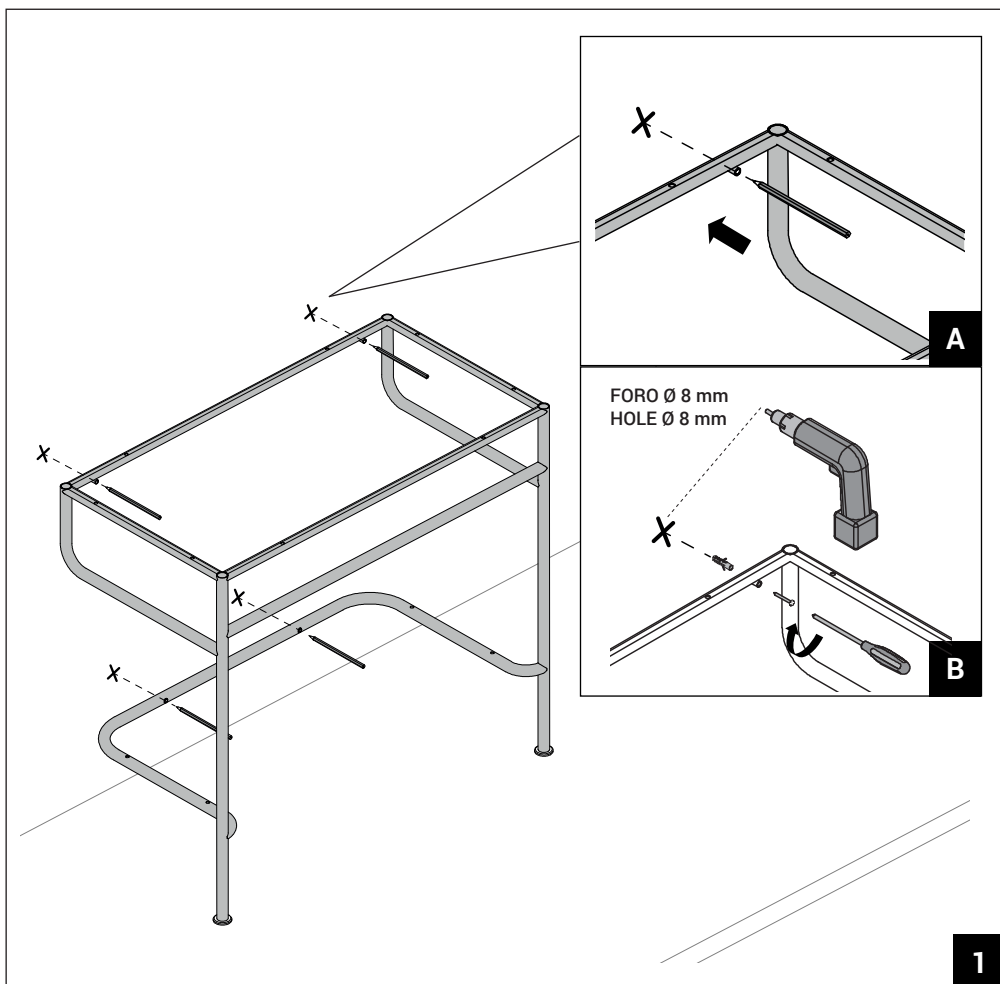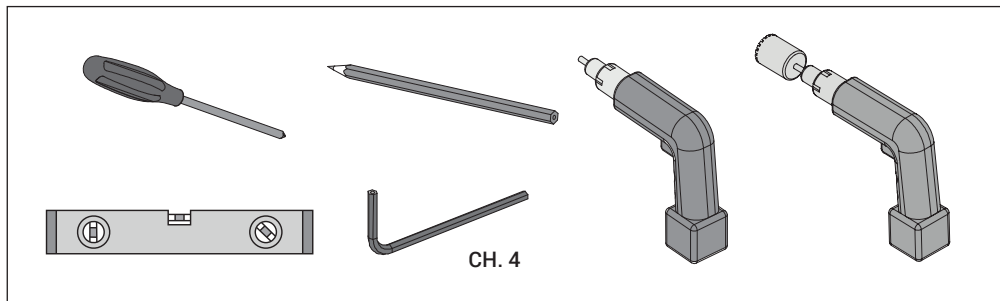


OR

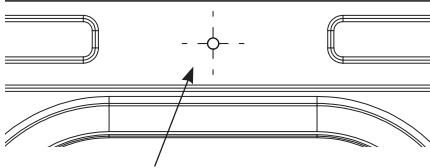

FORO Ø 6 mm  
HOLE Ø 6 mm

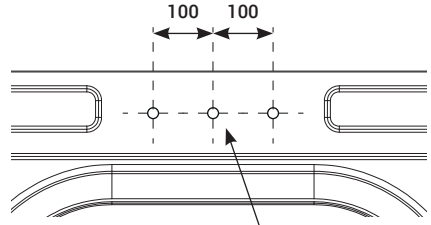


3 FORI Ø 6 mm  
3 HOLES Ø 6 mm

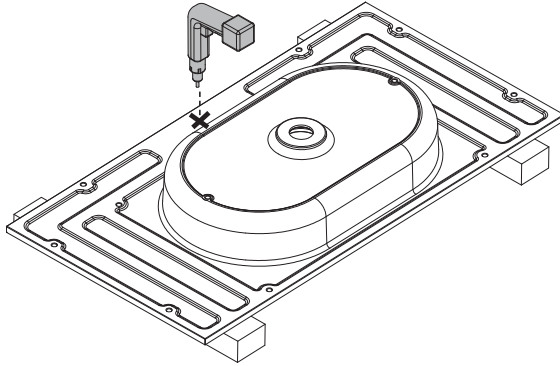


2


OR

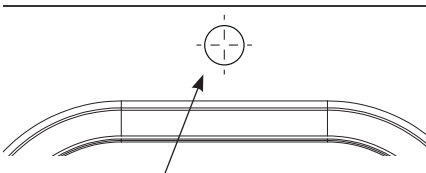



FORO Ø 35 mm  
HOLE Ø 35 mm


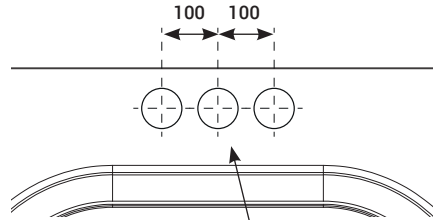


3 FORI Ø 35 mm  
3 HOLES Ø 35 mm

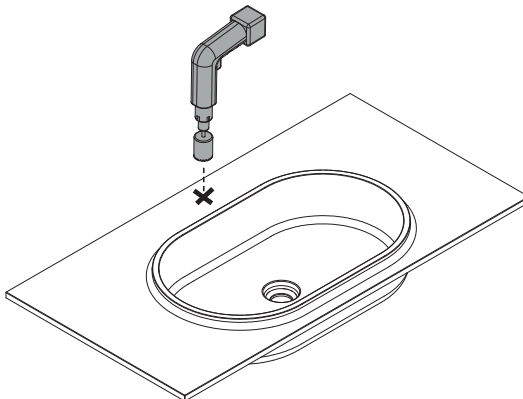

3

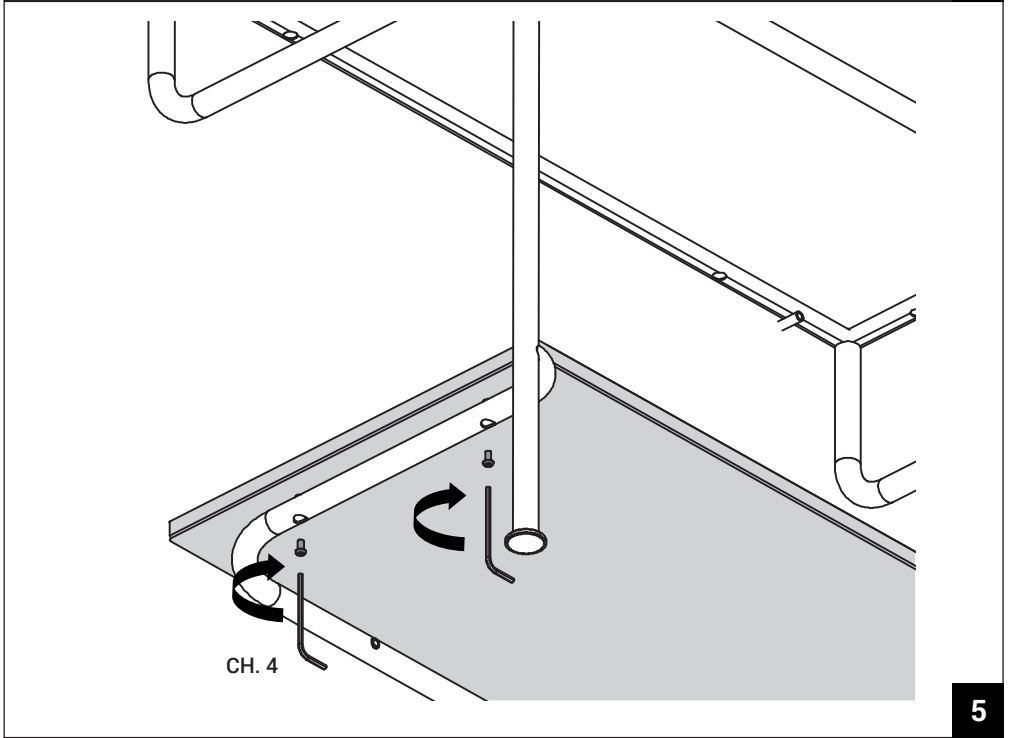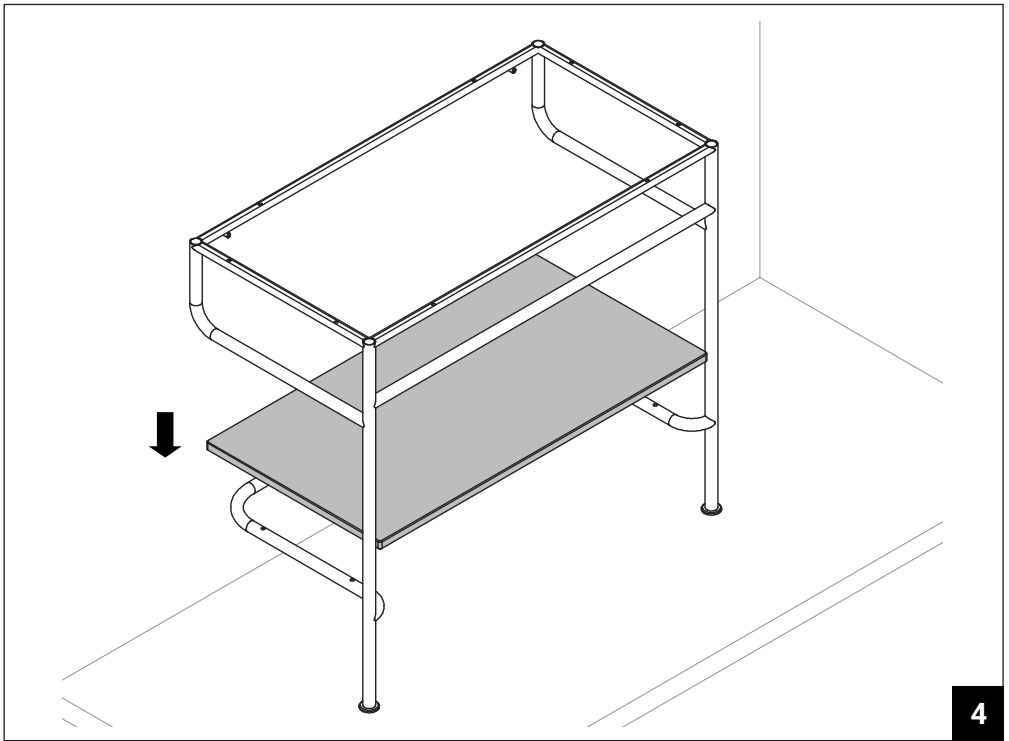

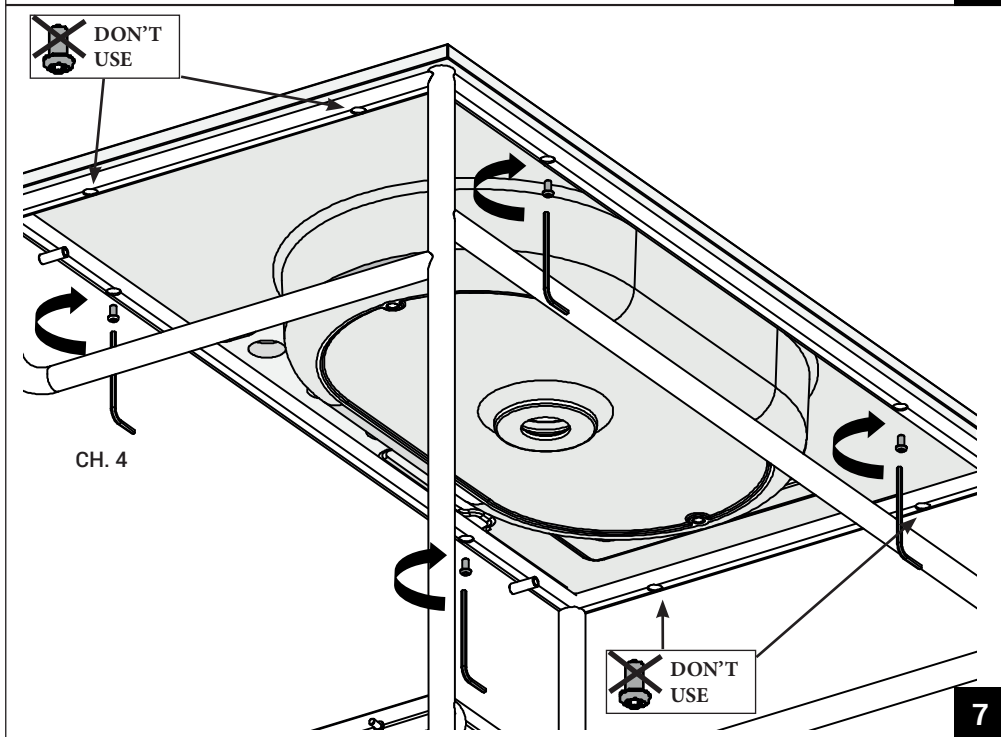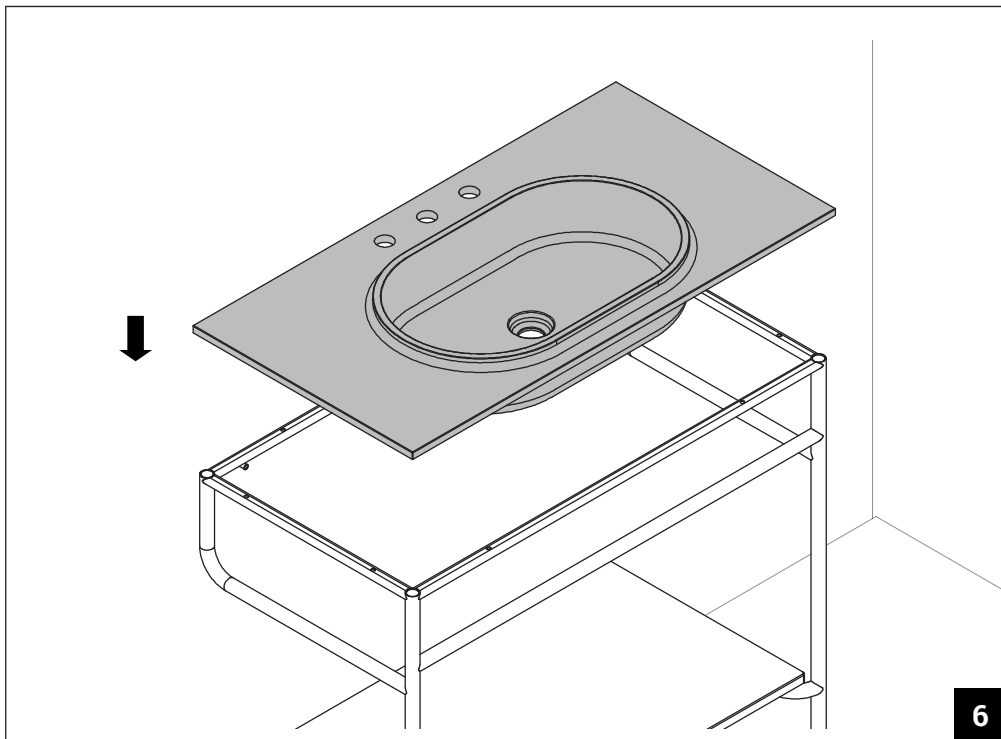

# KOS

Zucchetti Rubinetteria S.p.A.

Via Molini di Resiga, 29 - 28024 Gozzano (No) - Italy - Tel. +39 0322 954700 - Fax +39 0322 954823  
- [www.zucchettikos.it](http://www.zucchettikos.it)